


# User Manual of MPPT Solar Charge Controller

Suitable for Lead-acid batteries or Li-Ion batteries  
40A/50A/60A/80A/100A

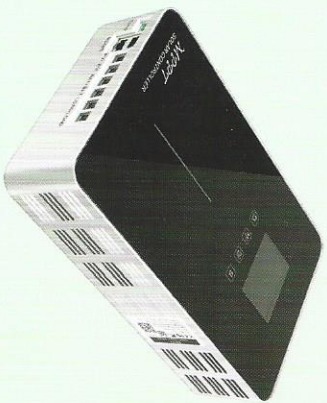

**Important safety instructions (Please keep this handbook for future reference. Please read all instructions and precautions in the manual carefully before installation.)**

This manual contains all the safety, installation and operation instructions of this series solar charge controller (hereinafter referred to as "controller").

- Install the controller in a well ventilated place. The controller's case temperature may be very high during operation. Please don't touch the metal shell directly to prevent burns.
- It is recommended to connect fuse or circuit breakers to the input, load and battery terminals to prevent electric shock hazard during use.
- After installation check all wiring connections are secure, so as to avoid the danger of heat build-up caused by virtual connection.
- If the controller does not display properly when first use, please cut off the fuse or circuit breaker immediately and check whether the wiring connection is correct or not.
- If the solar system needs to connect the inverter, please connect the inverter directly to the battery, instead of the load terminal of the controller.
- Don't disconnect the battery when the controller is charging. Otherwise, it may damage the DC load.

## Operation fault codes description

Code	Description	Code	Description
001	Battery over-voltage	100	Trigger over-voltage protection
002	PV over-voltage	200	Command model(Stop charging)
004	Overcharging	400	Battery system unrecognized
008	Over-discharging	600	Battery under-voltage

## System Voltage and Battery Types

- The controller identifies the system voltage according to the battery voltage at start-up. And the controller will re-identify the system voltage when power-off and restart. Please ensure the system voltage displayed in controller is consistent with the actual voltage. Otherwise, need to recheck the battery pack voltage.  
Note: Please refer to Table 9 for the battery detailed system identification voltage.
- The controller has 3 kinds of conventional battery charging parameters (Table 2). To change other types of batteries, please select "USER", then set up by PC software or APP. To change lithium battery, please select "Li-Ion", then set up on the controller, APP or PC software.


Battery type	Constant voltage = C * N (V)	Floating voltage = F * N (V)	1 C = Cell's constant charging parameter (9 < F < C < 15) 2 F = Cell's floating charging parameter (8 < F < C < 15) 3 N = Series quantity of battery (1 <= N <= 4) [e.g. N=2, battery system is 24V] 4. Example: If battery system is 48V, then N=4; if the cell's voltage C=14.6V, then Constant voltage= 14.6*4=58.4V.
Flooded(LD)	14.6 * N	13.8 * N	
Sealed(SEL)	14.4 * N	13.8 * N	
Gel(GEL)	14.2 * N	13.8 * N	
User (USE)	C * N	F * N	

## Strip Indicator Instruction

The controller has bar indicator light, user can identify the controller current working status according to the color and flash rule of the light.

Strip Indicator Light	Instruction
Yellow Light	Standby state
Red Light	Error warning
Blue Light	Charging state
Green Light	Load indicators

## 1. Characteristics

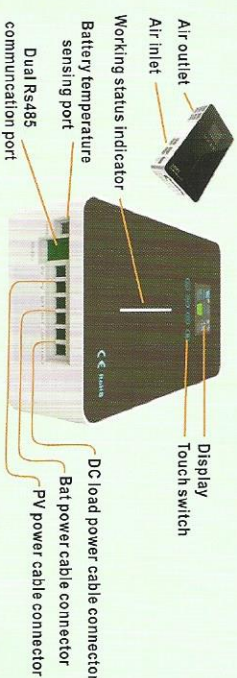

## 2. Product List

Product	Description	Quantity
MPPT controller	MPPT controller	1 unit
Installation accessories package	Mounting backboard Temperature sensing cable M4 screws (for mounting backboard) plastic expansion particles	1 pcs 1 pcs 4 pcs 4 pcs
Accessory pack	User manual	1 pcs
Optional	Bluetooth communication module	1 pcs
	External WIFI communication module	1 unit

Table 4 (If there are any parts missing, please contact dealer.)

## 3. Installation Instructions. (Please refer to the illustration at the end of the manual)

### 4. Serial connection(string) of solar panels

The Table 5 is the quantity (N) of solar panels in series, for reference only.

System Voltage	Voc * N = PV <sub>panel</sub> < DC150V (Table 5)									
	Voc<23V	Voc<31V	Voc<34V	Voc<38V	Voc<46V	Voc<52V	Voc<62V	Voc<72V	Voc<82V	Voc<92V
Max.	6	2	4	1	4	1	3	1	2	1
Best	6	2	4	1	4	1	3	1	2	1
Max.	6	3	4	2	4	2	3	2	2	1
Best	6	4	4	3	3	3	3	2	2	1
Max.	6	5	4	4	4	3	3	3	2	2
Best	6	5	4	4	4	3	3	3	2	2

### 5. DC Load Output Voltage and Max. Discharge Current


The controller has DC LOAD output function, and its output voltage range is the same as battery pack. For example, if the battery's voltage is 48.6V, the instant DC output voltage is 48.6V, too. It can supply power to DC LOAD continuously. If the DC LOAD's current is within the rated range. When the DC LOAD's working current is 100%-120% of rated current for 5 mins, DC LOAD will be OFF immediately. As soon as DC LOAD's working current is over 120% of rated current, the DC LOAD will be OFF immediately.

### 6. Communication port description

The communication port of the controller is compatible with RS485-USB communication cable for real-time monitoring by PC software and WIFI module to have remote cloud monitoring by APP. The communication port is a standard 8 pin RS485 interface, and the pins are defined as follows (Table 6):

Pin	Function
1	RS485-A
2	RS485-B
3	Dry contact
4	Dry contact
5	GND
6	GND
7	+5V(Non-isolated)
8	+5V(Non-isolated)

(Figure 2)

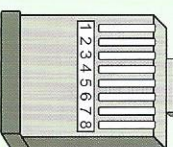

Note: The pin definition is applicable to our related products ONLY!


When the load output is off due to the triggering protection mechanism, the dry contact output interface will be ON (low impedance). Otherwise, it is OFF (high impedance).

The controller has dual RS485 communication ports. It can be used for communication and parallel connect. To monitor multiple controllers centrally, please set the device address order (1-254) of the controllers accordingly. For example, 5 controllers in parallel connection and monitor centrally, set controllers' address order as 1, 2, 3, 4, 5.

To monitor the multiple controllers in Master-Slave communication, set the host device address to 255. For example, 5 controllers in parallel connection, just need to set the MASTER(host) controller address order as 255.

## 7. Operation

### 7.1 LCD display area description

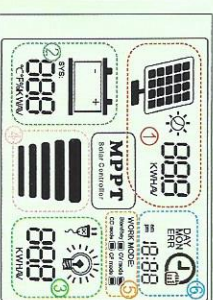

- PV Information
- Battery Information
- DC Load Information
- Charging navigator
- Working status
- System information

Button	Accessible Information	In setup mode function	Button	Setup Items
PV	PV voltage/ PV current/ PV power/ PV total energy		S	S01 Bat_Type->USER/SEL/F/D/GEL/LIT S02 Device address S03 Load mode->ON/OFF/USER S04 Date set S05 Charge-Volt->9-60V S06 Nominal-Volt->8.5-58V S07 Under-volt protection voltage S08 Over-volt protection voltage S09 Over-volt protection voltage S10 Over-volt protection voltage S11-S12 Realtime set S13-S14 Date set
BAT	Bat voltage/ Bat current/ Bat power/ Bat temp/ Bat type/ Device address	Go up / Increase		<ul style="list-style-type: none"> <li>• Long press 3S to enter or exit setup mode</li> <li>• Press the button: -&gt; Select settable parameters S01-S14, -&gt; Save parameters before exit</li> </ul>
DC	Load voltage/ Load current/ Load power/ Load total energy/ Load working mode	Go down / Decrease		

8. FAQ (Table 8)	Problem	Possible Reasons	Solution
Fault	Controller cannot start up, screen can not be on	Battery positive and negative reversely connected.	Check the wiring, reconnected in right order.
	Controller not charging, PV voltage undetectable	PV input positive and negative reversely connected.	Check the wiring, reconnected in right order.
Parameters	Controller is on and PV voltage is normal, but not charging.	The controller can not recognize battery system voltage. (The System in LCD shows).	Check whether battery voltage in LCD is in the range of controller system recognition. Solar panels quantity are too less to generate enough energy.
	The battery is in a low energy or empty for a long time.	Solar panels quantity are too less to generate enough energy. Battery capacity is too small to store enough energy.	Increase solar panels quantity. Increase battery capacity.

Product Category	Model	MPPT efficiency			
		R48L40	R48L50	R48L60	R48L80
Parameters	MPPT efficiency			≥ 98.5%	
	Standby consumption	1W-2W			1.5W-2.2W
	Heat-dissipating method			Fan-Cooling	
	Battery system voltage (Range/Lead acid)	12V system:9-15VDC	24V system:18-30VDC	38V system:32-40VDC	48V system:42-60VDC
	Li-Ion battery system			8-60VDC	
	Max. PV input voltage(Voc)			15VDC	
	Min. Vmppt Voltage			Battery voltage + 2V	
	Start-up charging voltage			Battery voltage + 3V	
	Low input voltage protection			Battery voltage	
	Over voltage protection /Recovery			15VDC / 14.8VDC	
Charge Parameters	Rated PV Power	12V system 520W	650W	760W	1040W
	Recommended breaker	24V system 1040W	1300W	1560W	2080W
	48V system 2080W	1560W	1950W	2340W	2800W
	Li-Ion	504W-2016W	630W-2520W	756W-3024W	1008W-4032W
	Activation for lithium battery			Standard	
	Battery type(Default: Gel battery)			Sealed(SEL), Gel(GEL), Flooded(FLD) User-defined(USE), Li-Ion(LiI)	
	Rated charge current	40A	50A	60A	80A
	Temperature compensation			-3mV/C(2V/default)	
	Charge method			3-stage: C/C(Constant Current), C/V(Constant Voltage), C/F(Floating Charge)	
	Output voltage stability accuracy			± 0.2V	
LOAD Parameters	Rated load current			30A	
	Low voltage protection			ON/OFF mode, PV voltage control mode, Dual-time control mode, PV + Time control mode	
	Setting method			Selectable	
	Display			PC software / APP / Controller	
	Communication			High-definition LCD segment code brightness display	
	Protection			Dual RS485 port / RS485 protocol / Centralized monitoring / Support Modbus communication protocol / PC (via RS485-USB Cable) & APP (via Wi-Fi module or Bluetooth module)	
	Operating ambient temperature			Input & output over-volt / low-voltage protection, reverse polarity protection, over-heating protection, battery shielding protection etc.	
	Storage temperature			-20°C ~ +50°C	
	IP(Ingress protection)			-40°C ~ +75°C	
	Altitude			IP21	
Other Parameters	Max. Wiring size			28mm <sup>2</sup>	
	Recommended breaker			≥ 80A	
	N. weight (kg) / G. weight (kg)			2.1 / 3.0	
	Product size / Packing size(mm)			305×185×72 / 420×275×150	
				390×210×80 / 490×350×195	

